


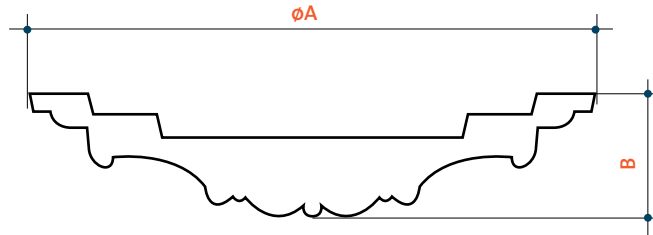

INSTALLATION INSTRUCTIONS • INSTRUCTIONS DE POSE • PLAATSINGSINSTRUCTIES • GEBRAUCHSANLEITUNG • MANUAL DEL USUARIO • GUIDA DELL'UTENTE • MANUAL DE UTILIZAÇÃO

Ref	øA		B	
	mm.	inches	mm.	inches
R.07	260	10 ¹ / ₄	40	19/16
R.08	380	14 ¹⁵ / ₁₆	40	19/16
R.09	485	19 ¹ / ₈	40	19/16
R.10	150	5 ⁷ / ₈	45	13/4
R.11	190	7 ¹ / ₂	40	19/16
R.12	200	7 ⁷ / ₈	25	1
R.13	285	11 ¹ / ₄	30	13/16
R.14	335	13 ³ / ₁₆	35	13/8
R.16	450	17 ¹¹ / ₁₆	45	13/4
R.17	470	18 ¹ / ₂	40	19/16
R.18	490	19 ⁵ / ₁₆	45	13/4
R.19	420	16 ⁹ / ₁₆	30	13/16
R.22	770(max)	30 ¹ / ₄ (max)	40	19/16
R.23	715	28 ¹ / ₈	55	23/16
R.24	790	31 ¹ / ₈	50	2
R.25	430(max)	16 ¹⁵ / ₁₆ (max)	40	19/16
R.27	750	29 ¹ / ₂	50	2
R.28	685	26 ¹⁵ / ₁₆	55	23/16
R.31	385	15 ³ / ₁₆	20	3/4
R.35	220	8 ¹¹ / ₁₆	35	13/8
R.37	850	33 ⁷ / ₁₆	60	23/8
R.38	710	27 ¹⁵ / ₁₆	50	2
R.39	530	20 ⁷ / ₈	50	2
R.40	745	29 ⁵ / ₁₆	40	19/16
R.46	535	21 ¹ / ₁₆	45	13/4
R.50	320	12 ⁵ / ₈	40	19/16
R.51	430	16 ¹⁵ / ₁₆	35	13/8
R.52	695	27 ³ / ₈	65	29/16
R.53	495	19 ¹ / ₂	45	13/4
R.61	400	15 ³ / ₄	35	13/8
R.62	400	15 ³ / ₄	50	2
R.64	955	37 ¹¹ / ₁₆	80	3 ¹ / ₈
R.66	545	21 ⁷ / ₁₆	40	19/16
R.70	435	17 ¹ / ₈	35	13/8
R.71	455	17 ¹⁵ / ₁₆	25	1
R.72	460	18 ³ / ₁₆	30	13/16
R.73	760	27 ⁵ / ₈	30	13/16
R.74	650	25 ¹³ / ₁₆	45	13/4
R.75	760	29 ³ / ₄	45	13/4
R.76	620	24 ³ / ₈	50	2
R.77	620	24 ³ / ₈	45	13/4



The dimensions given for each moulding are based on averages, and may vary slightly. Check measurements at job site before installing.

